

Leather Embossing Machine

LEM 1000

User Manual

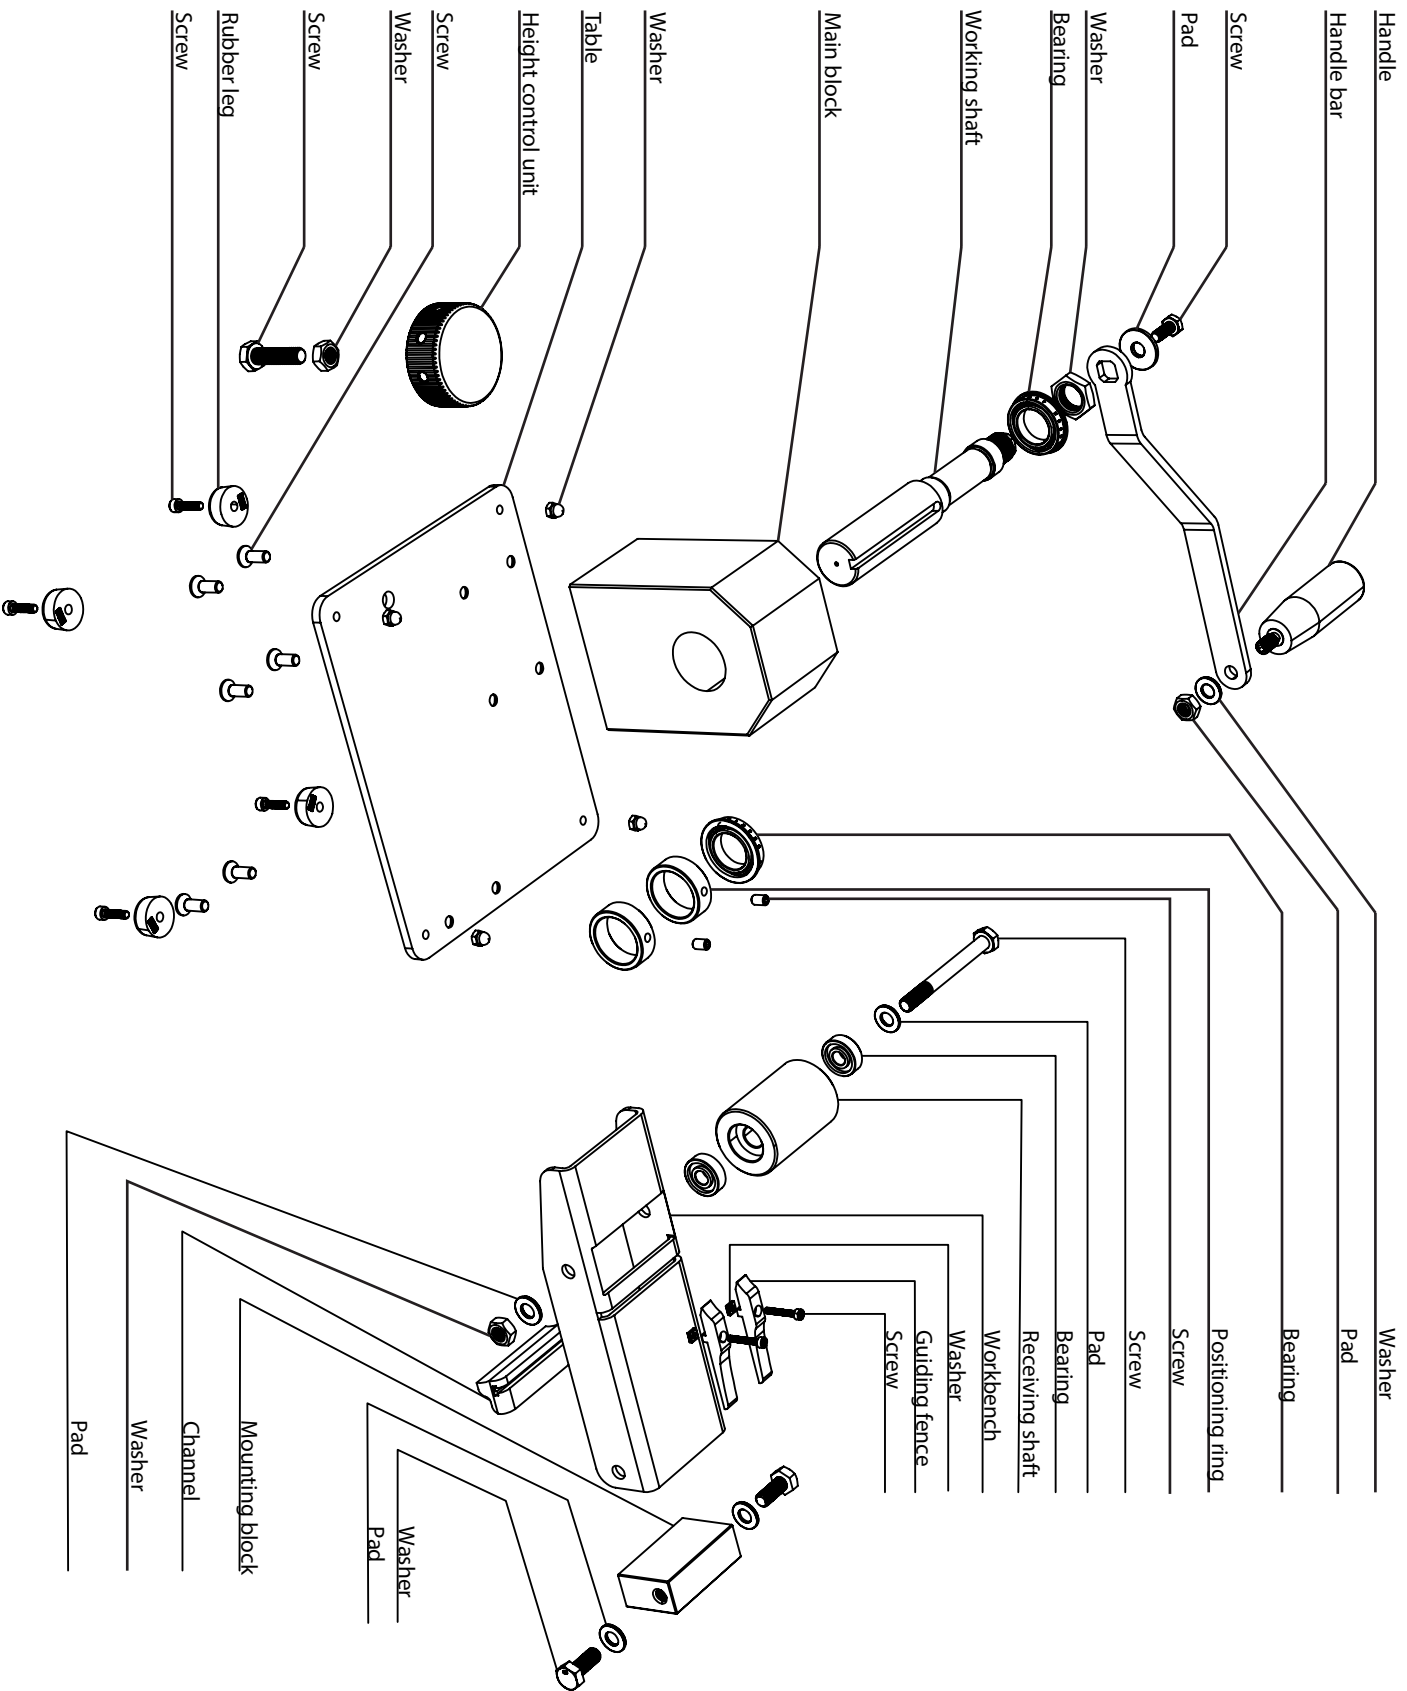 


Table of context:

1. List of parts.....	3
2. Technical drawing.....	4
3. Adjusting the positioning of embossing wheel.....	5
4. Adjusting the hight o the table and smbossing pressure.....	5
5. Adjusting the position of the guiding rails.....	6
6. Attaching and detaching the handle bar.....	6

 
List of parts:

1. 1x base table
2. 1x wor table
3. 4x rubber leg
4. 4x leg screw and washer
5. 1x receiving shaft
6. 1x working shaft
7. 2x embossing wheel positioning ring
8. 2x embossing wheel positioning ring screw
9. 2x synthetic guide
10. 2x guide screw
11. 1x synthetic channel
12. 1x hight adjusting roundel
13. 1x table front block
14. 2x front block screw
15. 2x bearing
16. 1x crank
17. 1x crank screw
18. 1x handle
19. 1x main block
20. 2x working shaft bearing
21. 2x reciving shaft bearing
22. 1x working shaft screw
23. 1x working shaft small washer
24. 1x working shaft big washer
25. 1x hight adjusting roundel screw and washer



Adjusting the position of embossing wheel

1. using provided allen screwdriver unscrew the screw located in the ring and move the ring or remove it from the working shaft.
2. place the rings in the desired position and tighten the screws.

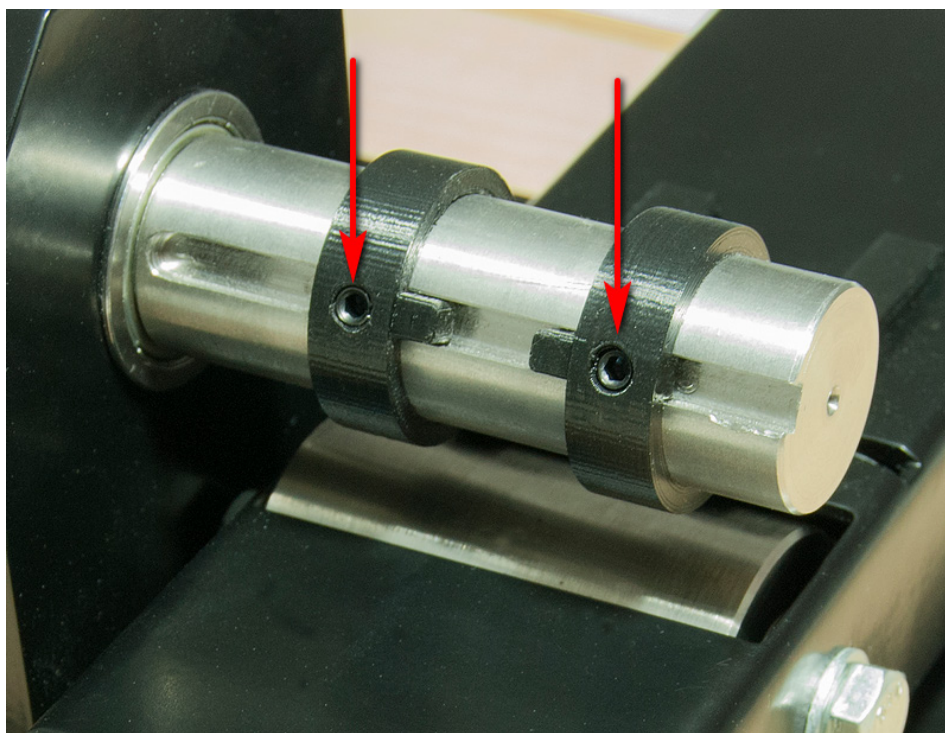


Adjusting the height of the table and embossing pressure

1. turn left or right the height control module



Adjusting the position of the guiding rails

 1. using the provided allen screwdriver loosen the screw on each guiding rail
2. move each guiding rail to the desired position
3. tighten each screw to lock the guiding rail in the desired position

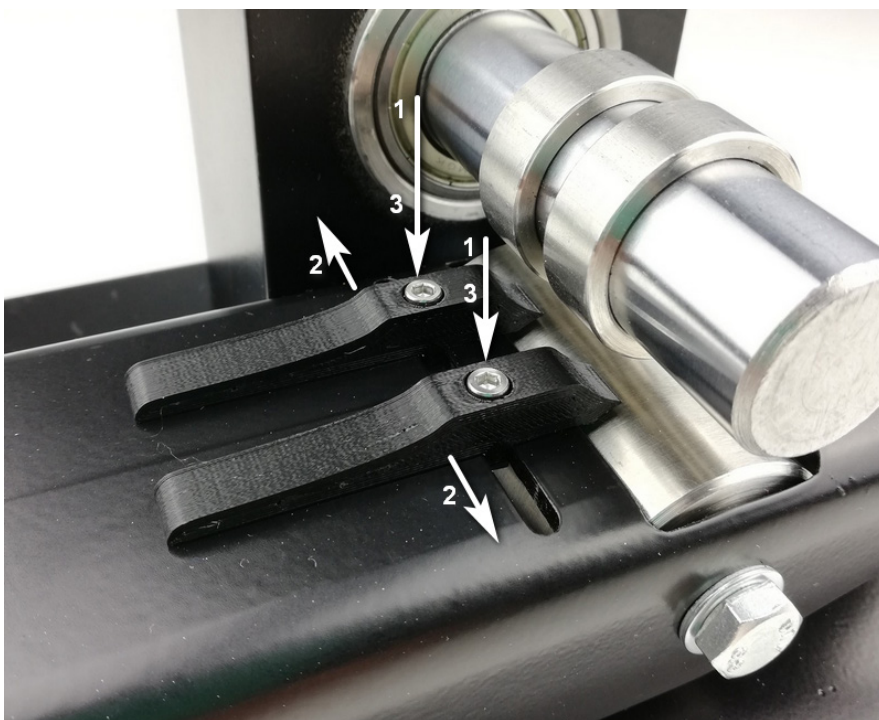

Attaching and detaching the handle bar

1. loosen or tighten the crank screw.

